

Work Order ID 133420

Monday, June 08, 2015 4:01:05 PM

133420

Page 1

Item ID: D412-666-011 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Gross Weight Towing Adapter
 Start Date: 6/04/15 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 6/08/15 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: MLJ Date: JUN 09 2015 Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr	J.A							
IIN D412-666	Rev C1								
100	Document Control	0.00							
100	DOCUMENT CONTROL								
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile & type labels per PPP412-666-011		CHG 004						
									DAS 02 9-89 JUL 08 2015
110	Pick Kit	0.00							
110									
Packaging	Memo	0.00							
Packaging									J.A JUL 07 2015 DAS 27 9-89
120	QC4- 100% Inspect kits for completeness	0.00							
120									
QC	Memo	0.00							
Quality Control									DAS 02 9-89 JUL 08 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																		
Description Work Order Deviation				Disposition			Completed By																		
Root Cause		FAULT CATEGORY																							
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐	OTHER : ☐																			

Work Order ID 133420

Monday, June 08, 2015 4:01:05 PM

133420

Page 2

Item ID: D412-666-011

Accept

N900040100Setup Start ***NS1***

Revision ID:

Item Name: Gross Weight Towing Adapter

Stop ***NS2***Start Date: 6/04/15 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 6/08/15 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130	Packaging	0.00							
130									
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D412-666-011 Location :FG023								CR120708 BT
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.00							
Quality Control									

MCS JUL 08 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>				Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																		
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																		
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																		
Large Fab ☐	Composite ☐	Supplier ☐																			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval																	
Description Work Order Deviation			Disposition																		
						Completed By															
						Lead hand / Supervisor Approval Verification															
			QC / QA Coordinator Approval																		
Root Cause		FAULT CATEGORY																			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐																
OTHER : ☐																					

Picklist Print

Monday, June 08, 2015 4:01:04 PM

Page 1

Work Order ID: 133420

133420

Parent Item: D412-666-011

D412-666-011

Parent Item Name: Gross Weight Towing Adapter

Start Date: 6/04/15

Required Date: 6/08/15

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP Rev:B Added GHG 002 NG 02-03-06
IPP Rev:C As per Rev C JLM 07-09-07 Verified By:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
AN6-15A		Purchased	No			110	Each	24.0000	4	4			
AN6-15A									**				
Bolt	DAS 02 9-89												
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST334				24					
				M128739				24					
AN6-45A		Purchased	No			110	Each	15.0000	4	4			
AN6-45A									**				
Bolt	DAS 02 9-89												
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST333				15					
				M126180				1					
				M131320				14					
D2888		Manufactured	No			110	Each	13.0000	2	2			
D2888									**				
Lug	DAS 02 9-89												
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST527				13					
				107975				3					
				114023				2					
				120184				8					

JUL 07 2015

DAS
27
9-89

DAS
27
9-89

DAS
27
9-89

4 JA

4 JA

1 JA

1

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Picklist Print

Monday, June 08, 2015 4:01:04 PM

Page 2

Work Order ID: 133420

133420

Parent Item: D412-666-011

D412-666-011

Parent Item Name: Gross Weight Towing Adapter

Start Date: 6/04/15

Required Date: 6/08/15

Start Qty: 1.00

Required Qty: 1.00

MS21042L6

Purchased

No

110

Each

452.0000

4

4

MS21042L6

Nut

DAS

27

9-89

DAS
02
9-89

Location

Loc Qty

Loc Code

ST260a

200

m132262

200

ST273A

200

m131624

200

ST305

1

m129909

1

t260a

51

m131317

51

NAS1149D0663J

Purchased

No

110

Each

1,718.000

8

8

NAS1149D0663J

Washer

DAS
02
9-89

Location

Loc Qty

Loc Code

ST260

651

M131618

651

ST260a

1000

M132256

1000

ST269

67

M126334

67

8

J.A

JUL 07 2015

DAS

27

9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			
				Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐
OTHER : ☐					

1.0 APPLICABILITY:

GROSS WEIGHT TOWING KIT D412-666-011 MAY BE INSTALLED ON DART D205-634-XXX OR D204-635-XXX OR D412-742-XXX SKIDTUBES INSTALLED ON 412 AIRCRAFT TO ALLOW GROUND HANDLING AT GROSS WEIGHT IN ACCORDANCE WITH BELL SERVICE INSTRUCTION BHT-412-SI-58. IT IS ALSO ACCEPTABLE TO INSTALL THIS KIT ON 204/205/210/212 AIRCRAFT EQUIPPED WITH DART SKIDTUBES IN ORDER TO PRESERVE THE LIFE OF THE AFT CROSSTUBES. THIS KIT CONTAINS ENOUGH PARTS TO INSTALL D2888 LUGS ON BOTH SKIDTUBES.

2.0 PARTS LIST:

QTY -011	PART	DESCRIPTION
X	D412-666-011	GROSS WEIGHT TOWING KIT
2	D2888	LUG
4	AN6-15A	BOLT
4	AN6-45A	BOLT
8	AN960JD616	WASHER
4	MS21042L6	NUT (or MS21042-6)

3.0 WEIGHT AND BALANCE:

INSTALLATION	WEIGHT	LONGITUDINAL	
		ARM	MOMENT
D412-666-011	1.90 lb 0.86 kg	163.0 in 4.14 m	310 in lb 3.56 m kg

4.0 PROCEDURE:

- 1) REMOVE AN6-12A BOLTS (4) ON INBOARD SIDE OF AFT SADDLE AND DISCARD. ON LANDING GEAR WITH DART AFT CROSSTUBES, REMOVE (4) AN6-40A BOLTS.
- 2) INSTALL D2888 LUGS WITH AN6-15A BOLTS (2) AS SHOWN IN FIGURE 1. USE AN6-45A (2) BOLTS ON DART CROSSTUBES, AS SHOWN IN FIGURE 2.
- 3) TORQUE BOLTS TO 95-110 in-lb (10.7-12.4 N-m).

5.0 NOTE:

IT IS ACCEPTABLE TO REPLACE THE AN6-15A/45A BOLTS WITH LONGER OR SHORTER AN6 BOLTS AS REQUIRED AND/OR INSTALL EXTRA AN960JD616 WASHERS UNDER NUT TO ENSURE 1.5 TO 4 THREADS IN SAFETY.

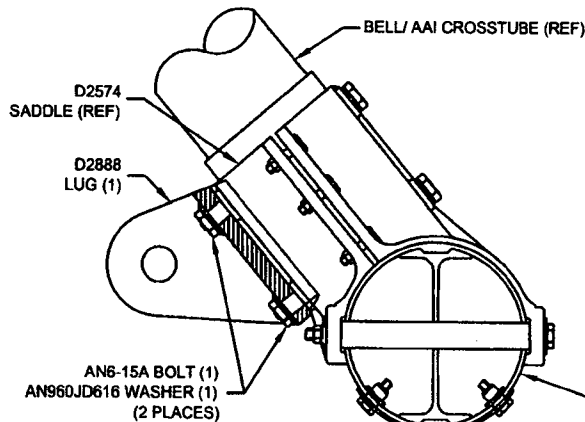


FIGURE 1
(BELL/AAI CROSSTUBES)

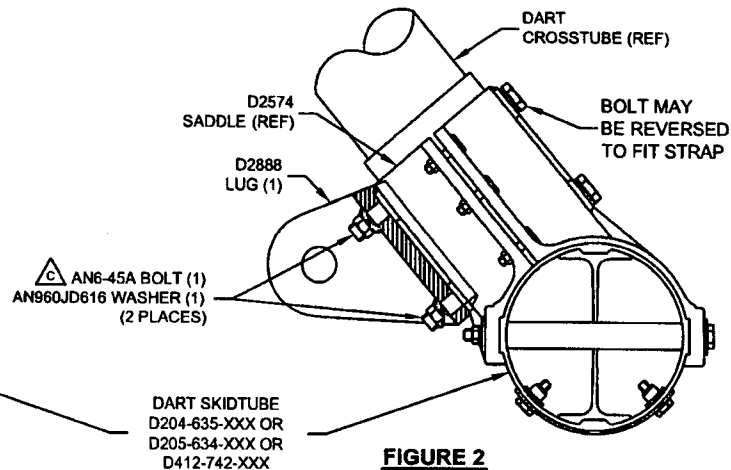


FIGURE 2
(DART CROSSTUBES)

C	- AN6-45A WAS AN6-43A, ADD NOTES - TO ENSURE COMPATIBILITY WITH D412-742-011/-013 - ESTIMATE (PARTS/PICK LIST) IS AFFECTED	MB	07.08.09
B	UPDATE KIT FOR BOTH SKIDTUBES AND COMPATIBILITY WITH DART CROSSTUBES	CP	02.03.04
A	NEW ISSUE	CP	99.05.03
REV.	DESCRIPTION	BY	DATE
DESIGN	PH	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	PH		
CHECKED	PH	DRAWING NO.	REV. C
MFG. APPR.	N/A	D412-666	SHEET 1 OF 1
APPROVED	PH	TITLE	SCALE
DE APPR.	PH	412 GROSS WEIGHT TOWING KIT	1:4
DATE	07.08.10	COPYRIGHT © 1999 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	